How to setup High Speed Broadband for Malaysia (TM Unifi / Maxis fibre Home) For DIR-868L.

Step 1 Connect Your PC (Laptop) to the Router (Port 1,2,3,4 either one of them) using Network cable.


Step 2 Launch your IE (Internet explorer) and key in 192.168.0.1 in the address column and press Enter.




Step 3 Enter your Username: admin and no password (if it is default) click on Log In



Step 4 You will see a D-Link configuration page, click on Setup > Internet > Manual Internet Connection Setup.

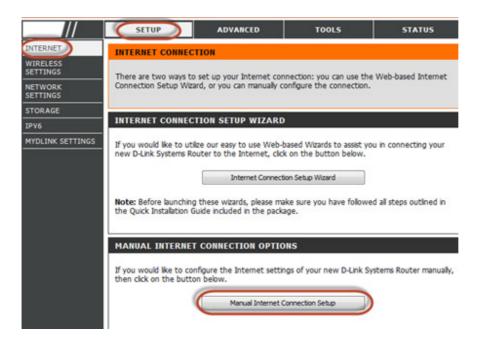

Step 5 For My Internet Connection select Unifi-PPPoE (Username / Password)



Step 6

Address Mode: Dynamic IP

Username: Username provided by your ISP Password: Password provided by your ISP




Step 7 Under VLAN Bridge, please enter the internet VLAN ID and IPTV VLAN ID, please check with your ISP for your VLAN ID

For Malaysia

TM Unifi	ID No.
Internet VLAN ID	500
IPTV VLAN ID	600

Maxis	ID No.
Internet VLAN ID	621
IPTV VLAN ID	823

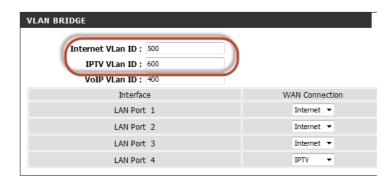

Step 8 Click on **Save setting** to complete internet setup.

